



PARTS LIST FOR SP-002 and SP-002F

SA-1	PISTON HOUSING*	SA-1-002
1-F	PISTON HOUSING REMOTE	1-F-002

PARTS LIST

DRWG. NO.	DESCRIPTION	PART NO.
3	PISTON SHAFT	3-002
5	PISTON CUP LOCK NUT	5-02
6	SAFETY LEVER ASSEMBLY	DA-1
7	SPOOL	7-02
8	SPOOL O’RING (2 required)	8-01-K10
9	SPOOL SPRING	9-01
11	SNAP RING	11-01
14	END CAP	14-002
15A	O-RING PISTON SEAL	15A-02
16	O-RING (2 required)	16-01-K10
17	O-RING	17-02-K10
18	O-RING	18-01
22	VALVE SPACER	22-02
24	VALVE WASHER	24-01
25-H	HEX CAM	25-H
29	PISTON WASHER	25-01
33	SCREW (2 required)	28-01-K10

* Sold with trigger assembly and air valve

** Items not used in SP-002F

*** Only sold as part of O-ring repair kit - #02-002-KIT

102-5	5 FT HOSE 1/8"X1/4" FITTING	102-5
104-	HANGER BRACKET	104

****Hose sent with each unit, two hoses sent with SP-002F

