



**PARTS LIST FOR SP-003 and SP-003F**

SA-1	PISTON HOUSING*	SA-1-003
1-F	PISTON HOUSING REMOTE	1-F-003

**PARTS LIST**

DRWG. NO.	DESCRIPTION	PART NO.
3	PISTON SHAFT	3-003
5	PISTON LOCK PLATE	5-003
6	SAFETY LEVER ASSEMBLY	DA-1**
7	SPOOL	7-003**
8	SPOOL O'RING (2 required)	8-01-K10***
9	SPOOL SPRING	9-01**
11	SNAP RING	11-01**
14	END CAP	14-003
15A	O-RING PISTON SEAL	15A-003***
16	O-RING (2 required)	16-003-K10***
17	O-RING	17-003-K10***
18	O-RING	18-01***
22	VALVE SPACER	22-003**
24	VALVE WASHER	24-01**
25-H	HEX CAM	25-H
29	VALVE WASHER	24-01
33	SCREW (2 required)	28-01-K10**
35	O-RING	35-003-K10***
36	PISTON SEAL HOLDER	36-003
37	MOUNT SCREW (3 required)	37-003-K10

\* Sold with trigger assembly and air valve

\*\* Items not used in SP-003F

\*\*\* Only sold as part of O-ring repair kit - #003-KIT

102-5	5 FT HOSE 1/8"X1/4" FITTING	102-5****
104-	HANGER BRACKET	104

\*\*\*\*Hose supplied with unit, two hoses sent with SP-003F

