


## PARTS BREAKDOWN

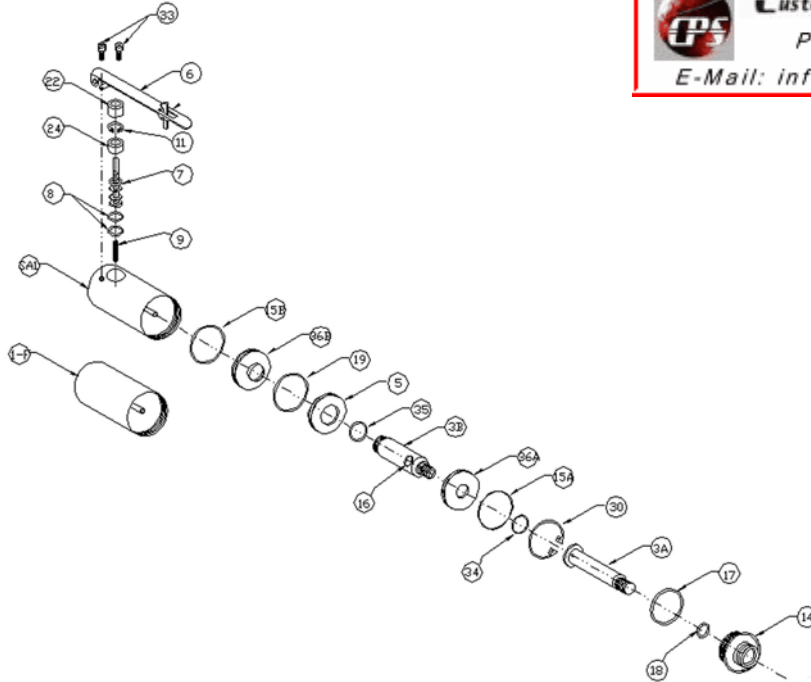

### SP-008 and SP-008F BREAKDOWN

SA-1	PISTON HOUSING*	SA-1-008
1-F	PISTON HOUSING REMOTE	1-F-008
DRWG. NO.	DESCRIPTION	PART NO.
3A	FRONT PISTON SHAFT	3A-005
3B	REAR PISTON SHAFT	3B-005
5	CYLINDER DIVIDER	5-008
6	SAFETY LEVER ASSEMBLY	DA-1**
7	SPOOL	7-008**
8	SPOOL O’RING (2 required)	8-01-K10***
9	SPOOL SPRING	9A-01**
11	SNAP RING	11-01**
14	END CAP	14-008
15A	FRONT PISTON SEAL	15A-008***
15B	REAR PISTON SEAL	15B-008***
16	PISTON SHAFT O’RING	16-003-K10***
17	O-RING	17-008-K10***
18	O-RING	18-005***
19	DIVIDER SEAL	17-008-K10
22	VALVE SPACER	22-02**
24	VALVE SPACER	24-006**
25-H	HEX CAM***** <i>(Note)</i>	25-H
30	PISTON SNAP RING	30-008
33	LEVER SCREW (2 required)	28-01-K10**
34	PISTON SHAFT O’RING	18-01***
35	PISTON SHAFT O’RING	35-005-K10***
36A	FRONT PISTON PLATE	36A-008
36B	REAR PISTON PLATE	36B-008

\*Sold with trigger assembly and air valve

\*\*Items not used in SP-008F

\*\*\*Only sold as part of o’ring repair kit—008-KIT

\*\*\*\*Hose supplied with unit, two hoses sent with SP-004F

\*\*\*\*\*Optional Cams available, for use with special tools—25-C-800, 25-F, 25-S, 25-R, 25-C