



PARTS LIST FOR SP-01P and SP-01PF

SA-1	PISTON HOUSING*	SA-1-01
1-F	PISTON HOUSING REMOTE	SA-1-01F

PARTS LIST

DRWG. NO.	DESCRIPTION	PART NO.
2	JAW HOUSING ASSEMBLY	SA-2-01
3	PISTON SHAFT	3-01P
5	PISTON LOCK NUT	5-01
7	SPOOL	7-01**
8	SPOOL O’RING (2 required)	8-01-K10***
9	SPOOL SPRING	9-01**
11	SNAP RING	11-01**
15A	O-RING PISTON SEAL	15A-01***
16	O-RING (2 required)	16-01-K10***
17	O-RING	17-01-K10***
18	O-RING	18-01***
22	VALVE SPACER	22-01**
23	PIVOT SCREW	23-01
24	VALVE WASHER	24-01**
25	PISTON WASHER	25-01
28	SCREW	28-01-K10**
30	ADJUSTING SCREW	30-01-K10
31	LOCK SCREW	31-01-K10
32	CAP SCREW	32-01
33	INSERT NUT	33-01
40	DUAL ACTION LEVER (safety)	DA-1**

* Sold with trigger assembly, air valve

** Items not used in SP-01PF

*** Only sold as part of O-ring repair kit - #01- 001-KIT

ACCESSORIES

102-5	5 FT HOSE 1/8”X1/4” FITTING	102-5****
104-	HANGER BRACKET	104

****Hose sent with power pack, two hoses sent with SP-01PF

