



PARTS FOR BP-1, BP-1F

ITEM	DESCRIPTION	PART#
1	PISTON HOUSING ASSEMBLY	1PP-BP
1F	PISTON HOUSING REMOTE	1PPF-BP*
2	END CAP	6-BP
6	LEVER ASSEMBLY	6TL-MSP
7	SPOOL	7A-MSP
8	O-RING (2 REQUIRED)	8-MSP
9	O-RING (2 REQUIRED)	9-MSP
10	VALVE BODY	10A-MSP
15	PISTON CUP	15-MSP
16	RETURN SPRING	16-BP
18	O-RING	18-MSP
26	SCREW	28-01

*INCLUDES #103 FOOTSWITCH

PARTS FOR BP-1, BP-1F

3Q	QUILL	3Q-BP
5	CAP SCREW	32-01
23	LOCK SCREW	23-BP
H	NOSE CONE	H-BP