

PARTS LIST FOR SP-002 and SP-002F

| SA-1 | PISTON HOUSING* | SA-1-002 |
|------|-----------------------|----------|
| 1-F | PISTON HOUSING REMOTE | 1-F-002 |

PARTS LIST

| DESCRIPTION | PART NO. |
|---------------------------|---|
| PISTON SHAFT | 3-002 |
| PISTON CUP LOCK NUT | 5-02 |
| SAFETY LEVER ASSEMBLY | DA-1 |
| SPOOL | 7-02 |
| SPOOL O'RING (2 required) | 8-01-K10 |
| SPOOL SPRING | 9-01 |
| SNAP RING | 11-01 |
| END CAP | 14-002 |
| O-RING PISTON SEAL | 15A-02 |
| O-RING (2 required) | 16-01-K10 |
| O-RING | 17-02-K10 |
| O-RING | 18-01 |
| VALVE SPACER | 22-02 |
| VALVE WASHER | 24-01 |
| HEX CAM | 25-H |
| PISTON WASHER | 25-01 |
| SCREW (2 required) | 28-01-K10 |
| | PISTON SHAFT PISTON CUP LOCK NUT SAFETY LEVER ASSEMBLY SPOOL SPOOL O'RING (2 required) SPOOL SPRING SNAP RING END CAP O-RING PISTON SEAL O-RING (2 required) O-RING VALVE SPACER VALVE WASHER HEX CAM PISTON WASHER |

^{*} Sold with trigger assembly and air valve ** Items not used in SP-002F

^{***} Only sold as part of O-ring repair kit - #02-002-KIT

| 102-5 | 5 FT HOSE 1/8"X1/4" FITTING | 102-5 |
|-------|-----------------------------|-------|
| 104- | HANGER BRACKET | 104 |

^{****}Hose sent with each unit, two hoses sent with SP-002F